

PM700 Process Oxygen Analysers



Paramagnetic analysers for high purity oxygen with full percent range capability



Features & Benefits

- Paramagnetic sensor with PID temperature control for best in class performance
- Large autoranging LED display
- Specific to oxygen
- Optional barometric pressure compensation for purity analysis
- Excellent linearity and accuracy
- Auto calibration option

Conforms to European Directives:

Electromagnetic Compatibility Directive 89/336/EEC Low Voltage Directive 73/23/EEC

Unmatched in High Performance On-Line Oxygen Analysis

Applications

Chemical / Petrochemical

Chemical Production
High Purity Gas Production
Hydrocarbon Refining
Natural Gas Transmission

Curing

Electron Beam
Ultraviolet

Electronics

Solder Powder Production
Semiconductor Furnaces
Gas Quality

Metals

Heat Treating / Annealing
Steel Production
Alloys and Powdered Metals

Pharmaceutical

Inert Packaging
Vessel Blanketing
Fermentation

Process

Ceramics
Combustion Analysis
Contact Lens Manufacturing
Food Packaging
Glass Fibre Optics
Inert Gas Welding
Lamp Manufacturing
Air separation

General

Controlled Environments
R & D
Glove Boxes
Oxygen Deficiency

Unmatched Performance

Systech Illinois has long been recognised worldwide as a leader in oxygen analysis.

Utilising the well proven magneto-dynamic (dumb-bell) transducer in the PM700 Systech Illinois offers the best in class of high performance oxygen analysis. These highly advanced instruments incorporate user-friendly software to provide accurate, reliable results.

Whatever your measuring range, the PM700 series has an analyser to suit your needs.

Cabinetry & Mounting

Three different configurations to match your needs.

- NEMA 4X / IP66 waterproof and weatherproof
- 19 in. rack mount
- Panel or bench mount
- UL and CUL approved Ex-proof

Explosion Proof Version

- UL and CSA approved
- Split architecture version for:
Class I, Groups B, C& D; Class II and Class III
- Nema 4/7 rated

Operator Interface /Diagnostics

- User-friendly menu
- Read-only mode available
- Diagnostic capabilities
- Fault alarms

Outputs & Alarm Options

- For charting, process control, or remote monitoring
- RS232 / 485
 - Analogue outputs (three channels)
 - High / low alarms
 - Fault alarms

Sampling Systems

- Bypass flowmeter
- Pressure regulator
- Sample pump
- Flow alarm

Sensor Selection

Now you can match sensor to application for the best possible reliability and performance. All Systech Illinois sensors are easily calibrated to ambient air. For ISO purposes and in specific applications, traceable calibration gases can be used to meet the most demanding quality assurance programmes.

PM720



PM730



PM710




Ex-Proof



Principle of Operation

The paramagnetic susceptibility of oxygen is significantly greater than that of other common gases, and for this reason the molecules of oxygen are attracted much more strongly by a magnetic field than the molecules of other gases. Most other gases are repelled by the magnetic field.

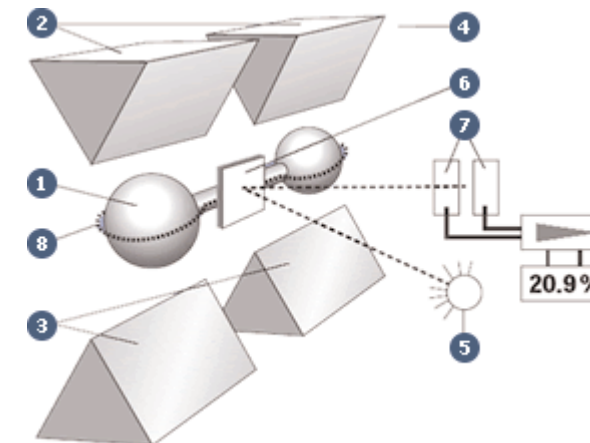

- | | |
|------------------|----------------|
| 1 Glass dumbbell | 5 Light source |
| 2 Pole shoe (N) | 6 Mirror |
| 3 Pole shoe (S) | 7 Photo diodes |
| 4 Measuring cell | 8 Wire loop |

The principle of measurement (Faraday's method) is based on a sensor in which a dumbbell comprising two nitrogen-filled spheres is arranged in rotational symmetry within a magnetic field. If the sample gas contains oxygen it is drawn into the magnetic field. The nitrogen inside the glass spheres has the opposite magnetic polarization and is forced out of the field, causing the dumb-bell to rotate.

The degree of rotation is directly proportional to the oxygen concentration. A mirror reflects a beam of light onto a pair of photocells. When the dumb-bell starts to rotate, a potential difference is generated at the photocells. The resulting current is amplified and conducted around the dumbbell through windings. The current flow generates an electromagnetic counter moment which causes the dumb-bell to return to its original position.

The current needed to maintain the dumb-bell in its null position is directly proportional to the oxygen concentration.

PM700 Process Oxygen Analysers



PM710

Bench/Panel Mount
190H x 237W x 410D (mm)
8.5kg



PM720

IP66/NEMA 4X
Wall Mount/Weatherproof
460H x 380W x 160D (mm)
16.5kg



PM730

Rack Mount 4U - 19 inch
Houses 1 or 2 Analysers
178H x 484W x 410D (mm)
10.1kg (single unit)

Technical Specifications

Measurement range	Autoranging from 0.01 to 100% O ₂
Display resolution	2 decimal places (0.01 to 99.99%)
Display type	5 digit High Visibility LED
Response time	90% of reading (T90) less than 2 seconds
Linearity	Better than $\pm 0.1\%$ O ₂
Zero point drift	Better than $\pm 0.05\%$ per week
Repeatability	Better than $\pm 0.02\%$ O ₂
Pressure compensation	Automatic compensation option

Operating Conditions

Sample Gas Pressure	0.1 to 5 BarG
Ambient Temperature	-10 to +45°C
Sample Connections	1/8" OD Compression fittings
Communications	RS232/485

Power Requirements

Power Supply	230/115 Vac, 50/60 Hz at 40VA
--------------	-------------------------------

Options

High/Low Alarms	2 volt free changeover contacts. Rated 240V, 3A
Analogue Outputs	Scaleable 4-20mA (0-20mA), 0-10V, 0-100mV all isolated
Pressure Compensation	Integrated absolute pressure compensation, 800-1100 mBar
Sample Stream Options	Internal sample pump, Flow alarm, Pressure regulator
Ex-Proof Sensor Housing	Use this option for explosive gas mixtures (e.g. H ₂ , Butane, CO, H ₂ S etc)

Systech Illinois have over 25 years experience of providing analysis solutions for a wide range of industries. From our manufacturing plants in the UK and U.S we produce gas analysers for industrial process industries, headspace analysers for monitoring gas flushing of food products and our range of permeation analysers.

Systech Instruments Ltd (UK)

17 Thame Park Business Centre,
Wenman Road,
Thame, Oxfordshire OX9 3XA
Tel: +44 (0)1844 216838
Fax: +44 (0)1844 217220
E-mail: sales.uk@systechillinois.com
www.systechillinois.com

Illinois Instruments, Inc (U.S)

2401 Hiller Ridge Road
Johnsburg, Illinois 60051
U.S.A
Tel: +1 815 344 6212
Fax: +1 815 344 6332
E-mail: sales.usa@systechillinois.com
www.systechillinois.com

Illinois Instruments (Thailand)

6th fl Nopnarong Bldg No7
Ladprao23, Jatujak, Bangkok 10900
Thailand
Tel: +66 (0)2938 0798
Fax: +66 (0)2938 1058
E-mail: sales.ap@systechillinois.com
www.systechillinois.com

Systech Illinois (China)

Room 1105 Forte Building,
No. 910 Quyang Rd, Hongkou district,
Shanghai, China 200434
Tel: +86 21 65533022
Fax: +86 21 65539651
Email: info@systechillinois.cn
www.systechillinois.cn