


CA56 Cylinder Analysis System



Cylinder Analysis System for measurement of trace gas impurities in inert gas cylinders

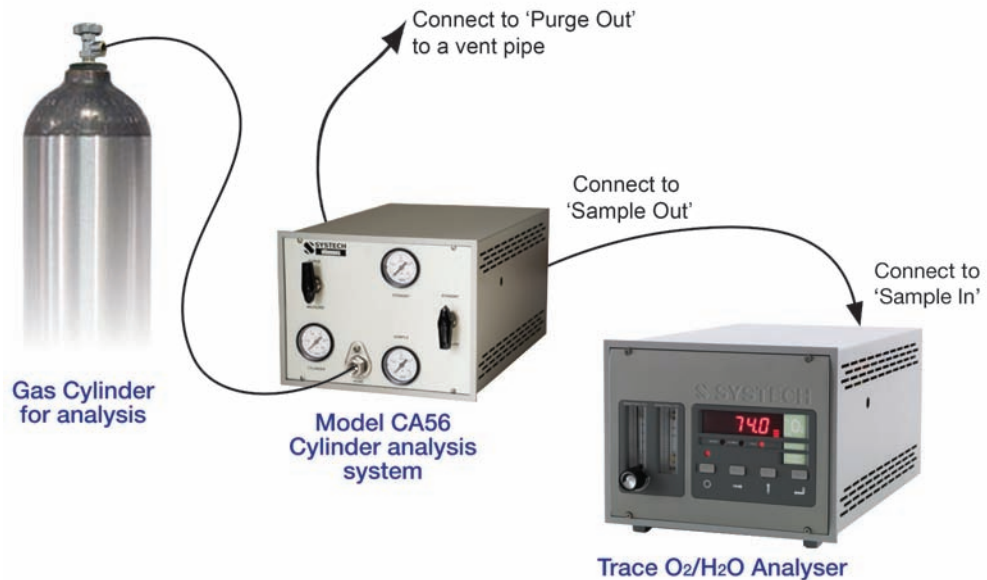

Features & Benefits

- Simple high pressure (250 Bar) connection to the cylinder
- Can be used with any gas analyser
- Quickly determine trace gas impurities within minutes.

Technical Specifications

Test Cylinder Pressure	2-250 barg (15-3700 PSI) regulated
Gas Fittings	1/8 in Swagelok® (supplied)
Enclosure	Epoxy coated heavy gauge steel
Dimensions	234W x 350D x 177H mm (23 x 29 x 13in)
Weight	4.2 kg (9.2 lb)

The cylinder analysis system from Systech Illinois is capable of quickly and easily measuring trace gas impurities such as oxygen, moisture or other trace impurities. This is essential for inert gas manufacturers who require every gas cylinder to be checked for impurities before delivery to their customers.

The issue with using trace oxygen and moisture analysers in this type of application is the time required for the cells

to purge down to low levels. To purge the system from ambient air can take several hours or even days. This makes the analysis of many cylinders per day very challenging.

Therefore Systech Illinois have developed a cylinder purge sample system to make these connections simple, to purge each cylinder and to determine the trace impurities within minutes.